BASICS 2.0



NO SPARKLING WATER (only gas)

- 1. Check POWER; to reboot remove chord from powerpoint
- 2. Slow down? Systems deliver 2-3 bottles/min.

NO STILL WATER (or Sparkling)

- 3. Check mains water tap is ON
- 4. **Frozen.** Turn OFF overnight & check still tap before power ON

NO/LOW BUBBLES / Low Flow on Sparkling

- 5. Co2 tank empty (see over)
- 6. Pressure too low (set to 3.8 see over)
- 7. Check lever on sparkling tap is not shut off (flow control)

WHISTLING / DINGING SOUND

8. **Change gas tank** (valve on tank is making sound)

NOT COLD - VENTILATION IS IMPORTANT

- 9. **Don't block vents** or house in a cupboard
- 10. Clean dust on vents regularly

NEVER MOVE MACHINE from its original position

GOT AN ISSUE? CHECK THE BASICS FIRST!

Operator error and call outs can result in extra costs