 


# CHANGING GAS

**MODA**<sup>TM</sup>  
*Sparkling*

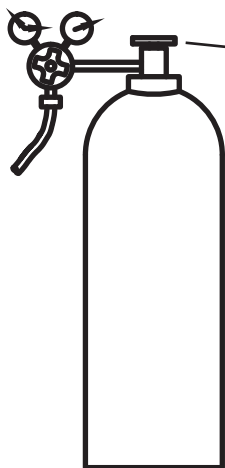

1. Turn off gas tank
2. With spanner unscrew regulator from tank; turn L
3. Screw regulator to new tank; turn R
4. Turn on gas at bottle and both gauges flick up

**Simple check for leaks;** to confirm regulator is tight

1. Turn tank off at the bottle for 2 minutes
2. Check both gauges stay in position
3. If not, remove regulator and repeat

## Pressure gauge

 
Typical setting 3.8 Bar  
380kpa (+/-20)

## Vent

Vents over 5 Bar  
Safety feature

## Pressure adjust

Turn R to turn UP  
Lock nut behind constricts  
past set pressure

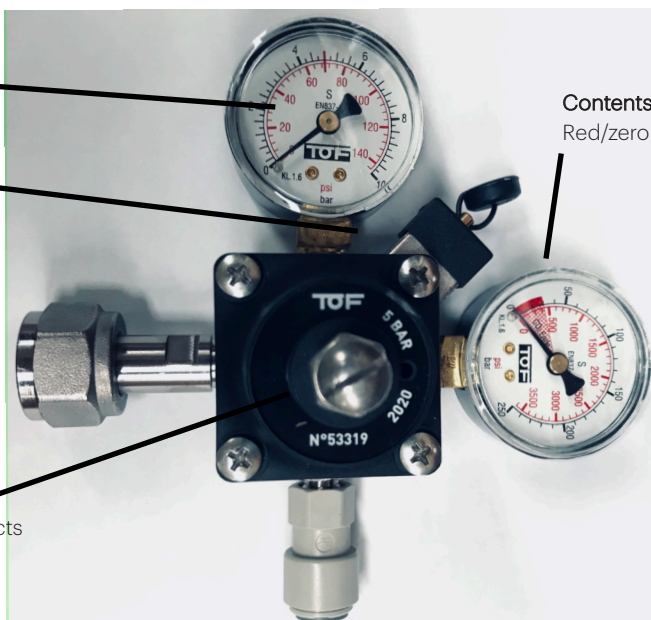

## Contents gauge

Red/zero = empty